



# Bottom Freezer Refrigerators

*Safety Instructions* .....2-4

*Operating Instructions*  
 Features .....6, 7  
 Ice Service .....8  
 Temperature Controls .....5

*Care and Cleaning*  
 Cleaning .....9, 10  
 Light Bulbs .....10

*Installation Instructions*  
 Preparing to Install  
 the Refrigerator .....11, 12  
 Removal of Freezer Drawer ...16, 17  
 Reversing the Door Swing ....12-15

*Troubleshooting Tips* .....18, 19  
 Normal Operating Sounds .....18

*Consumer Support*  
 Consumer Support .....Back Cover  
 Warranty for Canadian  
 Customers .....20  
 Warranty for U.S. Customers .....21

**Owner's Manual and  
Installation Instructions**

Model 21

Congélateur inférieur  
**Réfrigérateurs**

**Manuel d'utilisation  
et d'installation**

*La section française commence à la page 22*

Congelador inferior  
**Refrigeradores**

**Manual del propietario  
y instalación**

*La sección en español empieza en la página 42*

**Write the model and serial numbers here:**

**Model #** \_\_\_\_\_

**Serial #** \_\_\_\_\_

Find these numbers on a label on the left side, near the top of the refrigerator compartment.



# IMPORTANT SAFETY INFORMATION. READ ALL INSTRUCTIONS BEFORE USING.

## **⚠ WARNING!**

Use this appliance only for its intended purpose as described in this Owner's Manual.




## SAFETY PRECAUTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- This refrigerator must be properly installed and located in accordance with the Installation Instructions before it is used.
- Do not allow children to climb, stand or hang on the shelves in the refrigerator. They could damage the refrigerator and seriously injure themselves.
- Do not touch the cold surfaces in the freezer compartment when hands are damp or wet. Skin may stick to these extremely cold surfaces.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Keep fingers out of the “pinch point” areas; clearances between the doors and between the doors and cabinet are necessarily small. Be careful closing doors when children are in the area.
- In refrigerators with automatic icemakers, avoid contact with the moving parts of the ejector mechanism, or with the heating element that releases the cubes. Do not place fingers or hands on the automatic icemaking mechanism while the refrigerator is plugged in.
- Unplug the refrigerator before cleaning and making repairs.  
**NOTE:** We strongly recommend that any servicing be performed by a qualified individual.
- Turning the control to the **OFF** position does not remove power to the light circuit.
- Do not refreeze frozen foods which have thawed completely.

## **⚠ DANGER! RISK OF CHILD ENTRAPMENT**

### *PROPER DISPOSAL OF THE REFRIGERATOR*

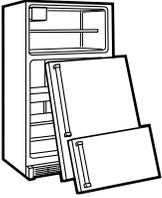

Child entrapment and suffocation are not problems of the past. Junked or abandoned refrigerators are still dangerous...even if they will sit for “just a few days.” If you are getting rid of your old refrigerator, please follow the instructions below to help prevent accidents.

#### ***Before You Throw Away Your Old Refrigerator or Freezer:***

- Take off the doors.
- Leave the shelves in place so that children may not easily climb inside.

#### ***CFC Disposal***

Your old refrigerator has a cooling system that used CFCs (chlorofluorocarbons). CFCs are believed to harm stratospheric ozone.

If you are throwing away your old refrigerator, make sure the CFC refrigerant is removed for proper disposal by a qualified servicer. If you intentionally release this CFC refrigerant you can be subject to fines and imprisonment under provisions of environmental legislation.



### *USE OF EXTENSION CORDS*


*Because of potential safety hazards under certain conditions, we strongly recommend against the use of an extension cord.*

However, if you must use an extension cord, it is absolutely necessary that it be a UL-listed (in the United States) or a CSA certified (in Canada), 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord be 15 amperes (minimum) and 120 volts.

# IMPORTANT SAFETY INFORMATION. READ ALL INSTRUCTIONS BEFORE USING.

Safety Instructions

## ⚠ **WARNING!**

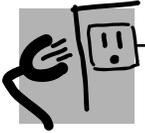

### HOW TO CONNECT ELECTRICITY

*Do not, under any circumstances, cut or remove the third (ground) prong from the power cord. For personal safety, this appliance must be properly grounded.*

The power cord of this appliance is equipped with a 3-prong (grounding) plug which mates with a standard 3-prong (grounding) wall outlet to minimize the possibility of electric shock hazard from this appliance.

Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded.

Where a standard 2-prong wall outlet is encountered, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.

The refrigerator should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating plate.

This provides the best performance and also prevents overloading house wiring circuits which could cause a fire hazard from overheated wires.


Never unplug your refrigerator by pulling on the power cord. Always grip plug firmly and pull straight out from the outlet.

Repair or replace immediately all power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end.

When moving the refrigerator away from the wall, be careful not to roll over or damage the power cord.

Operating Instructions

Installation Instructions

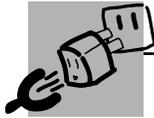

### USE OF ADAPTER PLUGS *(Adapter plugs not permitted in Canada)*

*Because of potential safety hazards under certain conditions, we strongly recommend against the use of an adapter plug.*

However, if you must use an adapter, where local codes permit, a **temporary connection** may be made to a properly grounded 2-prong wall outlet by use of a UL-listed adapter available at most local hardware stores.

The larger slot in the adapter must be aligned with the larger slot in the wall outlet to provide proper polarity in the connection of the power cord.

When disconnecting the power cord from the adapter, always hold the adapter in place with one hand while pulling the power cord plug with the other hand. If this is not done, the adapter ground terminal is very likely to break with repeated use.

If the adapter ground terminal breaks, **DO NOT USE** the refrigerator until a proper ground has been established.

*Attaching the adapter ground terminal to a wall outlet cover screw does not ground the appliance unless the cover screw is metal, and not insulated, and the wall outlet is grounded through the house wiring. You should have the circuit checked by a qualified electrician to make sure the outlet is properly grounded.*

Troubleshooting Tips

Consumer Support



**READ AND FOLLOW THIS SAFETY INFORMATION CAREFULLY.  
SAVE THESE INSTRUCTIONS**



# About the controls on the refrigerator.

The temperature controls on your refrigerator have letters and numbers. Initially set the refrigerator control at 5 and the freezer control at **C**.

If you want colder or warmer temperatures, adjust the refrigerator temperature first. When satisfied with that setting, adjust the freezer temperature.

Control settings will vary based on personal preferences, usage and operating conditions, and may require more than one adjustment.

After changing the controls, allow 24 hours for the refrigerator to reach the temperature you have set.

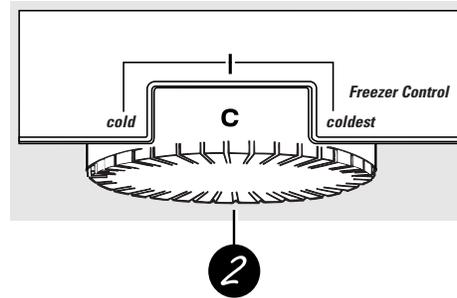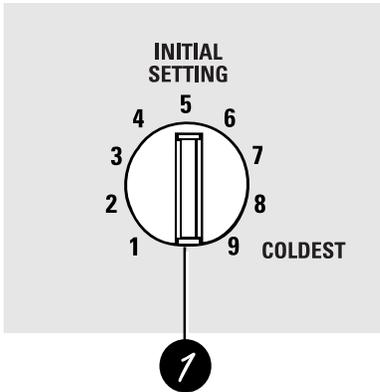

## Control Settings

### 1 Refrigerator Control

The refrigerator control maintains the temperatures throughout the refrigerator.

### 2 Freezer Control

The freezer control maintains the temperatures throughout the freezer compartment.

Moving the freezer control to **OFF** stops cooling in both areas—refrigerator and freezer—but does not shut off power to the refrigerator.


## About the refrigerator shelves and bins.

Not all features are on all models.


### Rearranging the Shelves

Shelves in the refrigerator compartment are adjustable.

*To Remove*

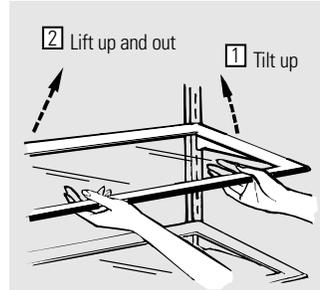


*To Replace*

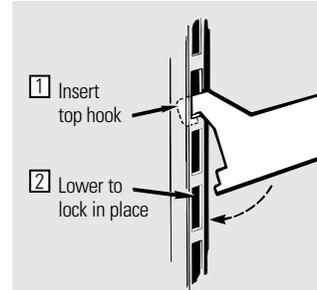

### Refrigerator Door Shelf

The bottom door shelf in the refrigerator compartment is removable for easy cleaning.

To remove, hold both ends and pull straight up.

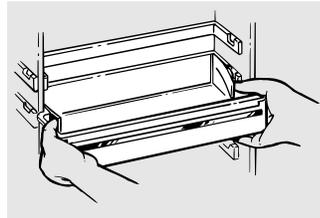


### Adjustable Bins on the Refrigerator Door

Adjustable bins can easily be carried from refrigerator to work area.


**To remove:** Use your thumbs or forefingers to push the lock tabs toward the center. Pull the bin straight out.

**The divider** helps prevent tipping, spilling or sliding of small items stored on the door shelf. Place a finger on either side of the divider near the front and move it back and forth to fit your needs.

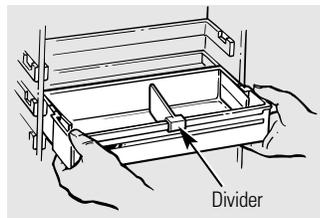


**To replace:** Slide the bin into the grooved area until the tabs lock into place.

Not all features are on all models.

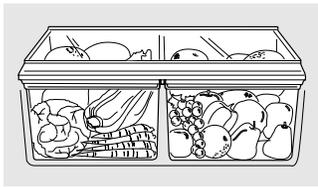

## Fruit and Vegetable Drawers


Excess water that may accumulate in the bottom of the drawers should be emptied and the drawers wiped dry.

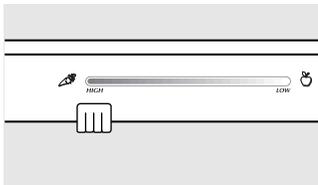

## Adjustable Humidity Drawers

Slide the control all the way to the **HIGH** setting to provide high humidity recommended for most vegetables.

Slide the control all the way to the **LOW** setting to provide lower humidity levels recommended for most fruits.

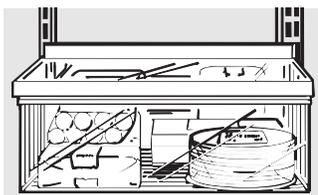

## Snacks Drawer

The snacks drawer can be moved to the most useful location for your family's needs.

## Drawer Removal

Drawers at the bottom of the refrigerator compartment stop before coming all the way out, to help prevent contents from spilling onto the floor. Drawers can be removed easily by tilting up slightly and pulling past "stop" location.

To remove drawers when the refrigerator compartment door cannot be opened all the way, first remove food and shelves above the drawers.


- 1 Remove the drawer farthest from the door.
- 2 Remove the glass top by pushing up from underneath and tilting it to clear the door. Be careful when handling the glass. We recommend wearing protective gloves.
- 3 Lift the empty drawer frame out.
- 4 Remove the center post.
- 5 Slide the other drawer and frame over and remove them. After cleaning, replace the drawers in reverse order.

## About the ice service.

---

Not all features are on all models.

---

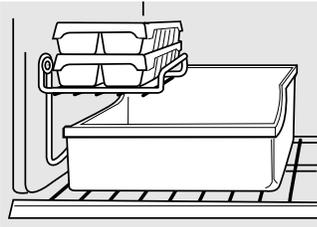

### Ice Service Compartment

The freezer has an ice service compartment with an ice tray shelf and a pull-out ice storage bin. They can both be moved to either side of the freezer.

**CAUTION:** Make sure shelf is secure before placing items on shelf to avoid property damage.

---

### Icemaker Accessory Kit

An icemaker accessory kit is available at extra cost.

Check the label located inside the refrigerator compartment on the upper left side for the specific icemaker kit needed for your model.

## Cleaning the Outside

**The door handles and trim.** Clean with a cloth dampened with soapy water. Dry with a soft cloth. Do not use wax on the door handles and trim.

**Keep the outside clean.** Wipe with a clean cloth lightly dampened with kitchen appliance wax or mild liquid dish detergent. Dry and polish with a clean, soft cloth.

*Do not wipe the refrigerator with a soiled dish cloth or wet towel. These may leave a residue that can erode the paint. Do not use scouring pads, powdered cleaners, bleach or cleaners containing bleach because these products can scratch and weaken the paint finish.*

**The stainless steel panels and door handles** (on some models) can be cleaned with a commercially available stainless steel cleaner such as Stainless Steel Magic.™

Stainless Steel Magic is available at Ace, True Value, Servistar, HWI and other leading stores. It is also available through GE Parts and Accessories, 800.626.2002, or visit our Website, GEAppliances.com. In Canada, call 1.888.261.3055 or visit our Website, geappliances.ca. Order part number WX10X15.

*Do not use appliance wax or polish on the stainless steel.*

## Cleaning the Inside

**To help prevent odors,** leave an open box of baking soda in the refrigerator and freezer compartments.

**Unplug the refrigerator before cleaning.** If this is not practical, wring excess moisture out of sponge or cloth when cleaning around switches, lights or controls.

Use an appliance wax polish on the inside surface between the doors.

Use warm water and baking soda solution—about a tablespoon (15 ml) of baking soda to a quart (1 l) of water. This both cleans and neutralizes odors. Rinse and wipe dry.

After cleaning the door gaskets, apply a thin layer of petroleum jelly to the door gaskets at the hinge side. This helps keep the gaskets from sticking and bending out of shape.

*Avoid cleaning cold glass shelves with hot water because the extreme temperature difference may cause them to break. Handle glass shelves carefully. Bumping tempered glass can cause it to shatter.*

*Do not wash any plastic refrigerator parts in the dishwasher.*



Clean the condenser coils at least once a year.

## Under the Refrigerator

For most efficient operation, keep the area under the refrigerator clean. Remove the base grille and sweep away or vacuum up dust.

For best results, use a brush specially designed for this purpose. It is available at most appliance parts stores.

## Care and cleaning of the refrigerator.

### Behind the Refrigerator

Be careful when moving the refrigerator away from the wall. All types of floor coverings can be damaged, particularly cushioned coverings and those with embossed surfaces.

Pull the refrigerator straight out and return it to position by pushing it straight in. Moving the refrigerator in a side direction may result in damage to the floor covering or refrigerator.

*When pushing the refrigerator back, make sure you don't roll over the power cord or icemaker supply line.*

### Preparing for Vacation

For long vacations or absences, remove food and unplug the refrigerator. Move the freezer control to the **OFF** position, and clean the interior with a baking soda solution of one tablespoon (15 ml) of baking soda to one quart (1 l) of water. Leave the doors open.


Move the icemaker feeler arm (for icemaker equipped models) to the **STOP** (up) position and shut off the water supply to the refrigerator.

If the temperature can drop below freezing, have a qualified servicer drain the water supply system (for icemaker equipped models) to prevent serious property damage due to flooding.

### Preparing to Move

Secure all loose items such as grille, shelves and drawers by taping them securely in place to prevent damage.

*Be sure the refrigerator stays in an upright position during moving.*

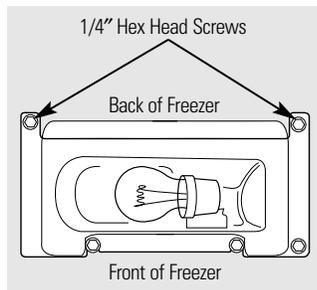

Freezer Light

### Light Bulb Replacement

Light bulbs are located at the top of the refrigerator and freezer compartments.


To replace a light bulb, unplug the refrigerator's power cord plug from the wall outlet.

#### Freezer Light

To remove light cover, remove the 1/4" hex head screws at the back of the cover. Slide the cover back and remove. After replacing with the same size bulb, reinstall the light cover and plug in the refrigerator.

#### Refrigerator Light

To remove the light cover, remove the 1/4" hex head screws at the back of the cover. Slide the cover back and remove. After replacing with same size bulb, reinstall light cover and plug in the refrigerator.

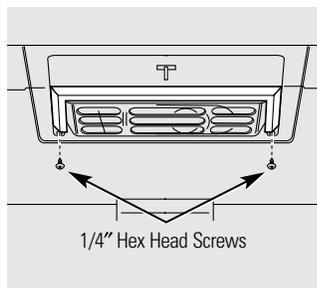

Refrigerator Light

# Preparing to install the refrigerator.

Read these instructions completely and carefully.



## Water Supply to the Icemaker

If the refrigerator has an icemaker, it will have to be connected to a cold water line.


A water supply kit (containing copper tubing, shutoff valve, fittings and instructions) is available at extra cost from your dealer or from Parts and Accessories, 800.626.2002.



## Refrigerator Location

Do not install the refrigerator where the temperature will go below 60°F (16°C) because it will not run often enough to maintain proper temperatures.

Install it on a floor strong enough to support it fully loaded.

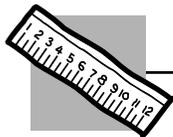


## Clearances

Allow the following clearances for ease of installation, proper air circulation and plumbing and electrical connections:


Sides .....	3/16" (4.8 mm)
Side (on hinge side next to a wall) .....	2 1/8" (54 mm)
Top .....	1" (25 mm)
Back .....	1" (25 mm)

## Base Grille

Remove both end caps, then remove the base grille by grasping it at the bottom and pulling it straight out.

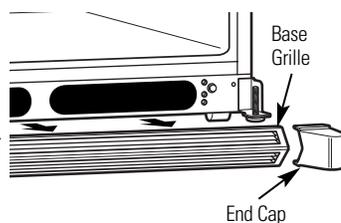

To replace the base grille, align prongs with slots in cabinet and push forward until the grille snaps into place. Snap the top of the end caps on first, then the bottom.

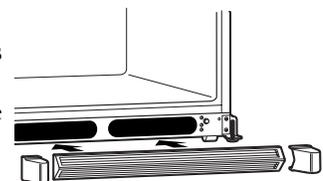


## Rollers

The rollers have 3 purposes:

- 1 Rollers adjust so the door closes easily when opened about halfway. [Front of refrigerator should be 1/4" (6 mm) higher than the rear of refrigerator.]
- 2 Rollers adjust so the refrigerator is firmly positioned on the floor and does not wobble.
- 3 Rollers allow you to move the refrigerator away from the wall for cleaning.

To adjust the rollers:

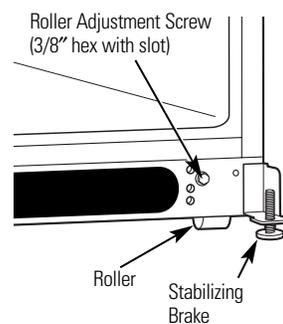

Remove the base grille. Turn the roller adjusting screws **clockwise to raise** the refrigerator, **counterclockwise to lower it**. Use a 3/8" socket wrench or adjustable wrench. Replace the base grille.

## Preparing to install the refrigerator.

*Read these instructions completely and carefully.*

### Stabilizing Brake


This refrigerator is equipped with leveling feet which serve as a stabilizing brake. These additional leveling feet will hold the refrigerator securely in position during operation and cleaning.

**To set the brake**, first remove the end caps and base grille. Second, adjust the rollers to the desired position. Then turn both leveling feet on each side until the feet are firmly in place against the floor.

After the brake is securely in place, unscrew the roller adjustment bolt counterclockwise until the weight of the refrigerator is supported by the stabilizing brake. This allows the weight to be positioned on the stabilizing brake.

Replace the base grille and reinstall the end caps.

Reverse the procedure to roll the refrigerator out.

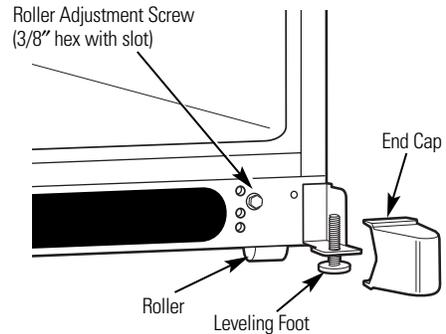

**CAUTION:** To avoid possible personal injury or property damage, the leveling feet must be firmly touching the floor.

## Removing the doors.

*The doors may need to be removed to move the unit through tight spaces.*

*You may also want to reverse the door swing for easier access to the refrigerator.*

## Reversing the door swing.

*Read these instructions completely and carefully.*



### Before You Begin

**When reversing the door swing:**

- Read the instructions all the way through before starting.
- Handle parts carefully to avoid scratching paint.
- Set screws down by their related parts to avoid using them in the wrong places.
- Provide a non-scratching work surface for the doors.

**IMPORTANT:** Once you begin, do not move the cabinet until door-swing reversal is completed.

*These instructions are for changing the hinges from the right side to the left side—if you ever want to change the hinges back to the right side, follow these same instructions and reverse all references to left and right.*



### Tools Required

- Phillips screwdriver
- Blade-type screwdriver or putty knife
- Masking tape
- 5/16" hex socket driver
- 3/8" socket and ratchet
- T15 Torx Driver


### Before Removing the Doors

- 1 Unplug the refrigerator from its electrical outlet.
- 2 Empty all door shelves, including the dairy compartment.

**CAUTION:** Do not let either door drop to the floor. To do so could damage the door stop.

### Remove the Refrigerator Door


- 1 Remove the top hinge cover (lift up on the outside edge and pull off).
- 2 Tape the door shut with masking tape at both upper corners.
- 3 With 5/16" hex socket driver, remove the 3 screws that hold the top hinge to the cabinet.
- 4 Lift the hinge straight up to free the hinge pin from the socket in the top of the door. Carefully peel off the adhesive backed spacer from the top of the cabinet.
- 5 Remove the tape, tilt the door away from the cabinet and lift it to free its bottom socket from the hinge pin on the center hinge bracket.
- 6 Set the door on a non-scratching surface.

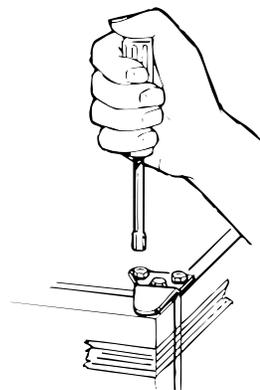

### To Reverse the Refrigerator Door— Transfer Center Hinge Bracket to the Left

- 1 Open the freezer drawer and remove the hinge bracket from the center right side of the cabinet by removing the three Phillips head screws.
- 2 Remove the three outermost 5/16" hex head screws from the center left side of the cabinet and insert them into the holes just vacated by the Phillips head screws on the center right side.
- 3 Remove the center hinge pin from the hinge bracket using a 5/16" hex socket driver. Invert the hinge bracket with shim and reinstall hinge pin in hinge bracket. Secure this assembly with the three Phillips head screws removed from the right side. Tighten all screws.


**NOTE:** If the washer is not on the hinge pin, check to see if it is stuck to the bottom of the door.

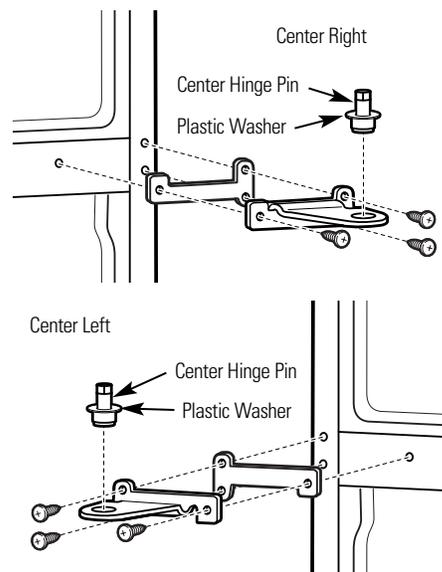

## Reversing the door swing.


### Transfer Top Hinge to the Left

Interchange the hinge and screws at the top right with the plastic plug buttons at the top left of the cabinet. Place the hinge, adhesive backed spacer and screws as shown. Do not tighten screws at this time.

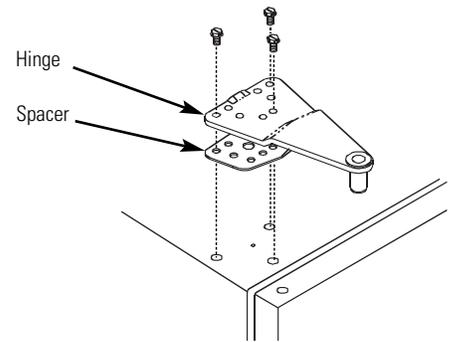



### Reversing the Refrigerator Handle

- 1 Remove screws from the top and bottom of the handle to release the handle from door.
- 2 Remove the plastic screws from the right edge of the door with a Phillips screwdriver and move them to the handle screw holes on the left edge of door.
- 3 Turn the handle upside-down and attach the handle to the right edge of the door with the screws at the top and bottom.
- 4 Transfer any hinge socket plug buttons to the opposite end on the top and bottom of both doors.

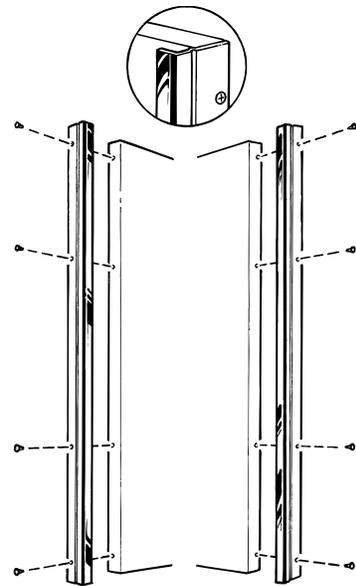


### Transferring the Door Stops

- 1 On the refrigerator door, move the metal door stop from the right end to the left end.
- 2 Move any screws from the left end to the right end.

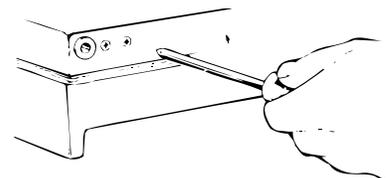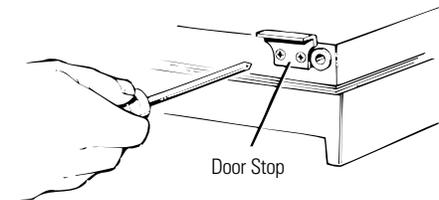

### Rehanging the Refrigerator Door

- 1 Lower the bottom socket of the refrigerator door onto the center hinge pin.
- 2 Tilt the door towards the cabinet, lifting the top hinge so the pin fits into the socket on the top of the door.
- 3 Tighten the top hinge screws to secure the door, making sure the top edge of the door is even with the top surface of the cabinet.

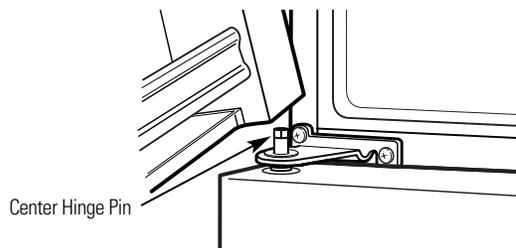

### Aligning the Doors

**CAUTION:** Do not loosen the center hinge bracket. To do so could cause both doors to fall away from the cabinet.

**Refrigerator Door:** Loosen the top hinge screws. Adjust the door so it is flush with the cabinet. Tighten screws.

## Removal of freezer drawer.


The freezer drawer can be removed, if needed, to fit through tight areas.

Read these instructions completely and carefully.

### To Remove the Freezer Drawer

#### To remove the baskets:


Open the freezer drawer all the way. Empty the freezer completely. Slide the top wire basket out all the way and lift it out. Remove the bottom basket by lifting it from the back first.

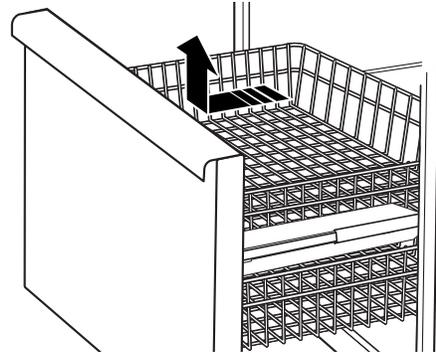

#### To remove the drawer front from the slides:


Unscrew the Phillips screw from each side of the rail. **DO NOT** remove the hex head screws from the rail assembly.

Lift the front handle of the freezer drawer to separate the drawer rails from the rail assembly.

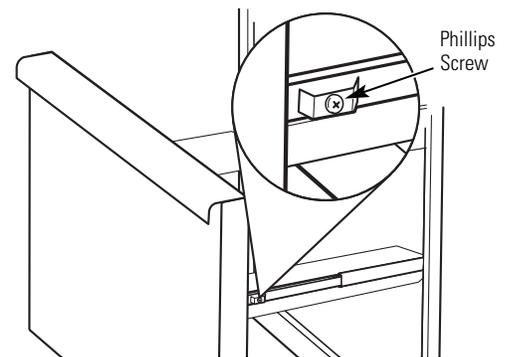

### To Remove the Stabilizing Brakes (if needed to fit through tight spaces)


Remove both end caps and the base grille. Remove both stabilizing brakes with 3/8" hex nut driver.

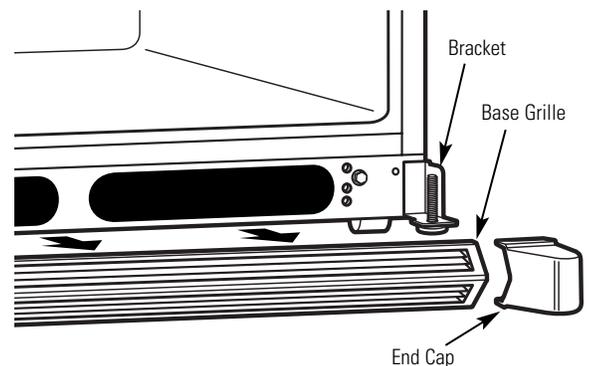


### To Replace the Freezer Drawer

**IMPORTANT:** Two people may be required to complete this procedure.


Pull out both interior rail assemblies to full length on each side of cabinet. Locate notches in both interior rail extensions.

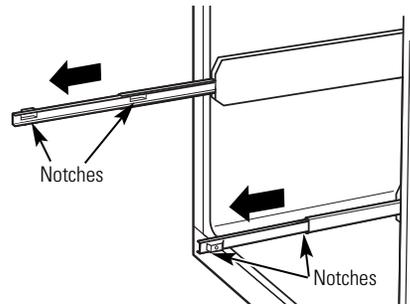


Align tabs on outside edge of drawer rail assemblies with notches in both rail extensions.

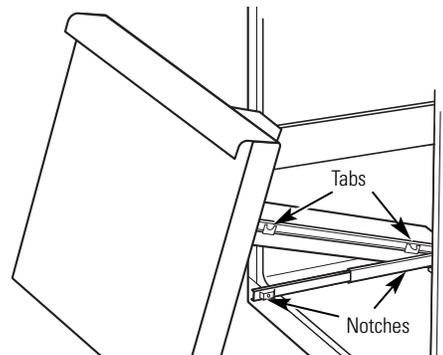

Insert the hook tab into the corresponding notch in the interior rail extension at a 45° angle. Insert the other tab into the corresponding notch in the interior rail extension by lowering the handle end of the drawer assembly.

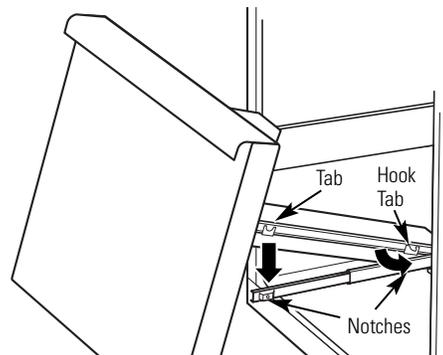


Replace the Phillips screws on both rail extensions.  
Replace the two freezer baskets.

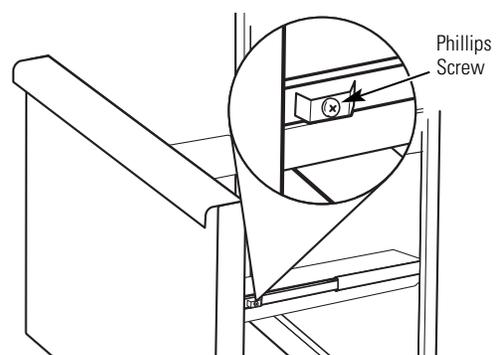

## Normal operating sounds.



Depending on the placement of the refrigerator in your kitchen, you may want to place a piece of rubber backed carpet under the refrigerator to reduce noise.

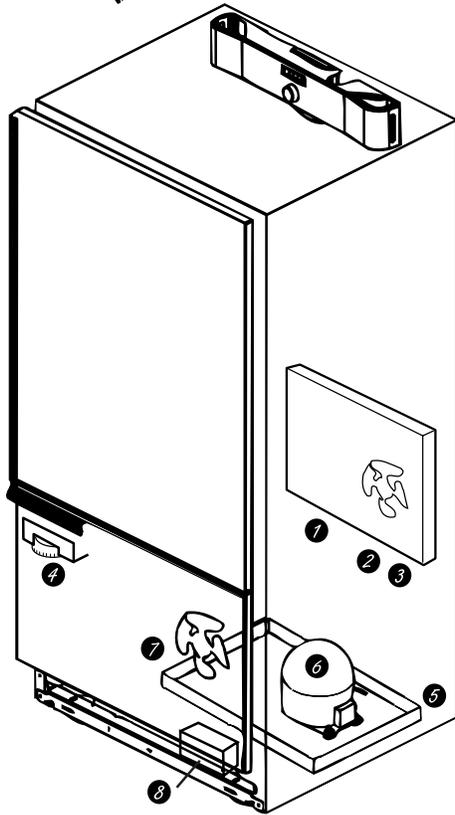

- ➊ **Evaporator Fan.** You may hear air being forced through the cabinet by the fan.
- ➋ **Evaporator.** The flow of refrigerant through the evaporator may create a boiling or gurgling sound.
- ➌ **Defrost Heater.** During defrost cycles, water dripping onto the heater may cause a hissing or sizzling sound. After defrosting, a popping sound may occur and the evaporator may create a boiling or gurgling sound.
- ➍ **Cold Control.** This part can produce a snapping sound when turning the refrigerator on or off.
- ➎ **Water Pan.** Water may be heard running into the drain pan during the defrost cycle.
- ➏ **Compressor.** Modern, high efficiency compressors operate much faster than older models. The compressor may have a high pitched hum or pulsating sound.
- ➐ **Condenser Fan.** You may hear air being forced over the condenser by the fan.
- ➑ **Defrost Timer.** The timer produces a sound similar to an electric clock.

## Before you call for service...



**Troubleshooting Tips**  
Save time and money! Review the charts on the following pages first and you may not need to call for service.

Problem	Possible Causes	What To Do
<b>Refrigerator does not operate</b>	Refrigerator in defrost cycle.	<ul style="list-style-type: none"> <li>• Wait about 30 minutes for defrost cycle to end. If lights work but the unit does not restart, remove the base grille. Locate the defrost timer mounted on the center rail and turn the timer knob clockwise until you hear a click. The refrigerator should begin operating.</li> </ul>
	Control in <b>OFF</b> position.	<ul style="list-style-type: none"> <li>• Move the control to a temperature setting.</li> </ul>
	Refrigerator is unplugged.	<ul style="list-style-type: none"> <li>• Push the plug completely into the outlet.</li> </ul>
	The fuse is blown/circuit breaker is tripped.	<ul style="list-style-type: none"> <li>• Replace fuse or reset the breaker.</li> </ul>
<b>Vibration or rattling (slight vibration is normal)</b>	Rollers need adjusting.	<ul style="list-style-type: none"> <li>• See <i>Rollers</i>.</li> </ul>

<b>Problem</b>	<b>Possible Causes</b>	<b>What To Do</b>
<b>Motor operates for long periods or cycles on and off frequently. (Modern refrigerators with more storage space and a larger freezer require more operating time. They start and stop often to maintain even temperatures.)</b>	Normal when refrigerator is first plugged in.	<ul style="list-style-type: none"> <li>• Wait 24 hours for the refrigerator to completely cool down.</li> </ul>
	Often occurs when large amounts of food are placed in refrigerator.	<ul style="list-style-type: none"> <li>• This is normal.</li> </ul>
	Door left open.	<ul style="list-style-type: none"> <li>• Check to see if package is holding door open.</li> </ul>
	Hot weather or frequent door openings.	<ul style="list-style-type: none"> <li>• This is normal.</li> </ul>
	Temperature control set at the coldest setting.	<ul style="list-style-type: none"> <li>• See <i>About the controls</i>.</li> </ul>
<b>Refrigerator or freezer compartment too warm</b>	Temperature controls not set cold enough.	<ul style="list-style-type: none"> <li>• See <i>About the controls</i>.</li> </ul>
	Warm weather or frequent door openings.	<ul style="list-style-type: none"> <li>• Set the temperature control one step colder. See <i>About the controls</i>.</li> </ul>
	Door left open.	<ul style="list-style-type: none"> <li>• Check to see if package is holding door open.</li> </ul>
<b>Frost or ice crystals on frozen food (frost within package is normal)</b>	Door left open.	<ul style="list-style-type: none"> <li>• Check to see if package is holding door open.</li> </ul>
	Too frequent or too long door openings.	
<b>Ice cubes have odor/taste</b>	Food transmitting odor/taste to ice cubes.	<ul style="list-style-type: none"> <li>• Wrap foods well.</li> </ul>
	Interior of refrigerator needs cleaning.	<ul style="list-style-type: none"> <li>• See <i>Care and cleaning</i>.</li> </ul>
<b>Slow ice cube freezing</b>	Door left open.	<ul style="list-style-type: none"> <li>• Check to see if package is holding door open.</li> </ul>
	Freezer control not set cold enough.	<ul style="list-style-type: none"> <li>• See <i>About the controls</i>.</li> </ul>
<b>Refrigerator has odor</b>	Foods transmitting odor to refrigerator.	<ul style="list-style-type: none"> <li>• Foods with strong odors should be tightly wrapped.</li> <li>• Keep an open box of baking soda in the refrigerator; replace every three months.</li> </ul>
	Interior needs cleaning.	<ul style="list-style-type: none"> <li>• See <i>Care and cleaning</i>.</li> </ul>
<b>Moisture forms on outside of refrigerator</b>	Not unusual during periods of high humidity.	<ul style="list-style-type: none"> <li>• Wipe surface dry and reset the refrigerator control one setting colder.</li> </ul>
<b>Moisture collects inside (in humid weather, air carries moisture into refrigerator when doors are opened)</b>	Too frequent or too long door openings.	

# CUSTOMER WARRANTY

(for customers in Canada)

Your refrigerator is warranted to be free of defects in material and workmanship.

What is covered	How Long Warranted (From Date of Sale)	Parts Repair or Replace at Camco's Option	Labour
Compressor	Ten (10) Years	Ten (10) Years	Five (5) Years
Sealed System (including evaporator, condenser tubing and refrigerant)	Five (5) Years	Five (5) Years	Five (5) Years
All Other Parts	One (1) Year	One (1) Year	One (1) Year

## TERMS AND CONDITIONS:

1. This warranty applies only for single family domestic use in Canada when the Refrigerator has been properly installed according to the instructions supplied by Camco and is connected to an adequate and proper utility service.  
Damage due to abuse, accident, commercial use, and alteration or defacing of the serial plate cancels all obligations of this warranty.  
Service during this warranty period must be performed by an Authorized Camco Service Agent.
2. Neither Camco nor the Dealer is liable for any claims or damages resulting from failure of the Refrigerator or from service delays beyond their reasonable control.
3. To obtain warranty service, purchaser must present the original Bill of Sale. Components repaired or replaced are warranted through the remainder of the original warranty period only.
4. This warranty is in addition to any statutory warranty.

## WHAT IS NOT COVERED:

- Service trips to your home to teach you how to use the product.
- Damage to finish after delivery.
- Improper installation—proper installation includes adequate air circulation to the refrigeration system, adequate electrical, plumbing and other connecting facilities.
- Replacement of house fuses or resetting of circuit breakers.
- Replacement of light bulbs.
- Damage to product caused by accident, fire, floods or acts of God.
- Loss of food due to spoilage.
- Proper use and care of product as listed in the owner's manual, proper setting of controls.
- **WARRANTOR IS NOT RESPONSIBLE FOR CONSEQUENTIAL DAMAGES.**

## IMPORTANT

**Keep this warranty and your bill of sale as proof of original purchase and purchase date.**

Camco Service is available coast to coast. If further help is needed concerning this warranty, contact:

Manager, Consumer Relations  
Camco Inc., Consumer Service  
1 Factory Lane  
Suite 310  
Moncton, New Brunswick E1C 9M3

*Staple your receipt here.  
Proof of the original purchase  
date is needed to obtain service  
under the warranty.*

# Refrigerator Warranty. *(For customers in the United States)*



All warranty service provided by our Factory Service Centers, or an authorized Customer Care® technician. To schedule service, on-line, 24 hours a day, visit us at [GEAppliances.com](http://GEAppliances.com), or call 800.GE.CARES (800.432.2737).

Staple your receipt here.  
Proof of the original purchase date is needed to obtain service under the warranty.

For The Period Of:	GE Will Replace:
<b>One Year</b> <i>From the date of the original purchase</i>	<b>Any part</b> of the refrigerator which fails due to a defect in materials or workmanship. During this <b>full one-year warranty</b> , GE will also provide, <b>free of charge</b> , all labor and in-home service to replace the defective part.
<b>Five Years</b> <i>From the date of the original purchase</i>	<b>Any part of the sealed refrigerating system</b> (the compressor, condenser, evaporator and all connecting tubing) which fails due to a defect in materials or workmanship. During this <b>five-year warranty</b> , GE will also provide, <b>free of charge</b> , all labor and in-home service to replace the defective part.

## What GE Will Not Cover:

- Service trips to your home to teach you how to use the product.
- Improper installation.
- Failure of the product if it is abused, misused, or used for other than the intended purpose or used commercially.
- Loss of food due to spoilage.
- Replacement of house fuses or resetting of circuit breakers.
- Damage to the product caused by accident, fire, floods or acts of God.
- Incidental or consequential damage caused by possible defects with this appliance.

*This warranty is extended to the original purchaser and any succeeding owner for products purchased for home use within the USA. In Alaska, the warranty excludes the cost of shipping or service calls to your home.*

*Some states do not allow the exclusion or limitation of incidental or consequential damages. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are, consult your local or state consumer affairs office or your state's Attorney General.*

**Warrantor: General Electric Company, Louisville, KY 40225**

Safety Instructions

Operating Instructions

Installation Instructions

Troubleshooting Tips

Consumer Support