

# Installation Instructions

## Maintop Rear Filler Kit for Electric Slide-In and Drop-In

### Tools Required:

1/4" Hex Head Driver

### Parts Supplied:

Maintop Filler Trim  
2 Screws

The purpose of the maintop rear filler kit is to fill the gap between the back of the range and the wall. (25" standard depth) For all dimensions refer to the Installation Instructions of your range.

## A Installation for Slide-In Range

- A1** Prior to installing the range, place the metal filler piece to the back of the range as shown in Fig. 1.
- A2** Start the 2 screws through the slots in the trim, into the upper holes at the outside rear of the range above the louvers. Hold the filler piece centered on the glass cooktop and push upward to close the gap between the bottom of the glass and the filler trim.
- A3** When the trim is set in the proper position, tighten the 2 mounting screws. The top of the trim should be located below the top surface of the glass to prevent pots, pans and skillets from damaging the painted part.

When the range is installed, the filler bracket should fill the gap completely. If a small gap occurs, the front of the countertop may be cut back slightly in the control panel area to close the gap. The filler panel is 30" wide to fit between an upswept countertop and does not match the outside edge of the glass. The dimension between the end of the rear filler panel and edge of the glass is approx. 5/8" on each side.

 
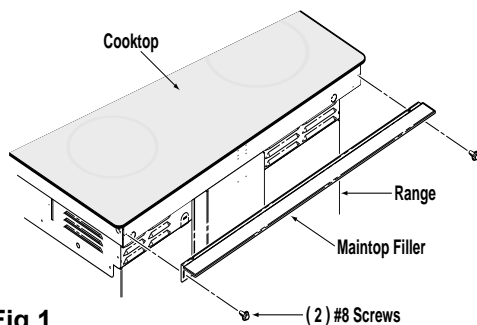 


Fig.1

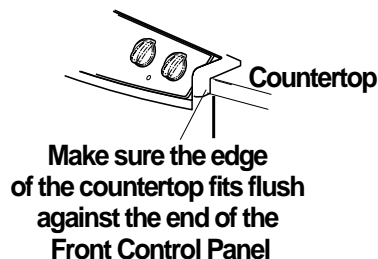 


# Installation Instructions

## B Installation for Drop-In Range

- B1** When the filler is being attached to the Drop-In Range, the anti tip bracket must be moved to the lower location No. 5 and proper attachments to the wall must be made to assure that the anti tip bracket engages below the attachment. See Figure 2 below. (Attachment must withstand 200lbs. of force at the engagement point)
- B2** Prior to installing the range, place the metal filler piece to the back of the range as shown in Figure 1.
- B3** Start the 2 screws through the slots in the trim, into the upper holes at the outside rear of the range above the louvers. Hold the filler piece centered on the glass cooktop and push upward to close the gap between the bottom of the glass and the filler trim.
- B4** When the trim is set in the proper position, tighten the 2 mounting screws. The top of the trim should be located below the top surface of the glass to prevent pots, pans and skillets from damaging the painted part.
- B5** Refer to the Drop-In Installation Instruction to complete the installation of the range in the cutout area.

Note: When the range is installed the filler bracket should fill the gap completely. If a small gap occurs, the front of the countertop may be cut back slightly in the control panel area to close the gap. The filler panel is 30" wide to fit between an upswept countertop and does not match the outside edge of the glass. The dimension between the end of the rear filler panel and the edge of the glass is approx. 5/8" on each side.

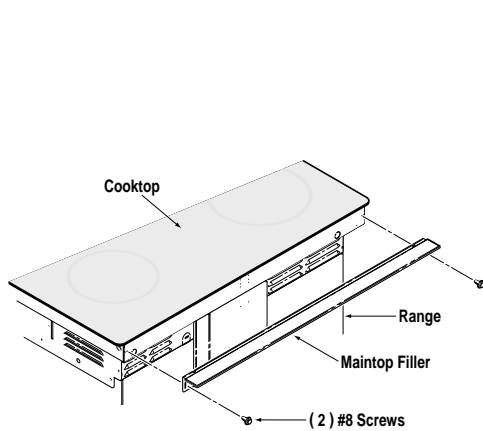

Make sure the edge of the countertop fits flush against the end of the Front Control Panel

